



OcuTrap R2 Quick Start

Setup — read this side first



Scan for setup videos


Full step-by-step videos & knowledge base at docs.ocutrap.com. This card covers the essentials.

1 Charge the battery




Charge with the pack's **black** connector only (not the yellow XT30). **Red** = charging, **green** = full. The R2 ships with the **5,200 mAh (56 Wh)** pack and its **1A** charger: about **5–6 hours**. Start it now.

2 Unbox & cut the motor zip tie

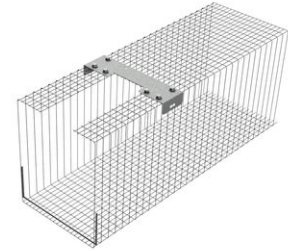

The motor is zip-tied to the cage for shipping. Cut the tie with snips or scissors and remove it. **Do not cut any wire.** Keep fingers clear of the door path. The door can swing once the tie is cut.

3 Mount the POD on the back

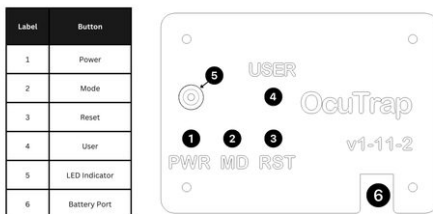

Slide the POD down the rails on the back of the cage; attach the top clip. Connect the motor wire with the **locking screw connector**. Secure the top latch.

4 Add the trap & arm



Battery into the POD (yellow **XT30**, straight in), close the latch, power on. Add the trap in the app, wait for **breathing cyan**, open the door, then tap **Arm**.

Flip over for app setup & arming →



OcuTrap R2 Quick Start

Activate & arm — after hardware is built

5 • SET UP THE APP

- 1 Create an account**
Go to **base.ocutrap.com** or download the mobile app, then sign up.
- 2 Add your trap**
In the app: **Account** → **Add Trap**. Scan the QR inside the POD or type the serial number.
- 3 Activate subscription**
Follow the in-app prompts. Your trap appears on the dashboard.

■ Safety

- **Finger injury risk.** Keep hands clear of the door and motor at all times.
- **Power off** and disconnect the battery before any maintenance.



Need help?

Scan for the full knowledge base, videos, and troubleshooting guides.
docs.ocutrap.com



Scan for setup videos

Full step-by-step videos & knowledge base at **docs.ocutrap.com**. This card covers the essentials.

6 • POWER ON & ARM

- 1 Power on**
Install charged battery; mate **XT30** before closing latch. Trap boots automatically.
- 2 Wait for breathing cyan**
Up to ~10 minutes to find cellular. A breathing cyan LED means connected.
- 3 Arm in the app**
Door must be **open**. Tap **Arm** in the app — the state LED turns yellow.

What the LED is telling you:

-  **Breathing cyan** — Connected — ready to arm
-  **Solid yellow** — Armed, door open, waiting
-  **Solid magenta** — Capture detected

- Use only the supplied charger (1A or 2A—match your pack). Do not submerge or expose to fire.
- Do not let children operate the trap. Wear gloves near captured animals.

DASHBOARD

base.ocutrap.com

Manage your traps & view images

SUPPORT

support@ocutrap.com

Include your trap ID in the subject

ALSO ONLINE

Full manual & operation cheat sheet at **docs.ocutrap.com**